




Page: 1/4
Date: 19-Aug-2020

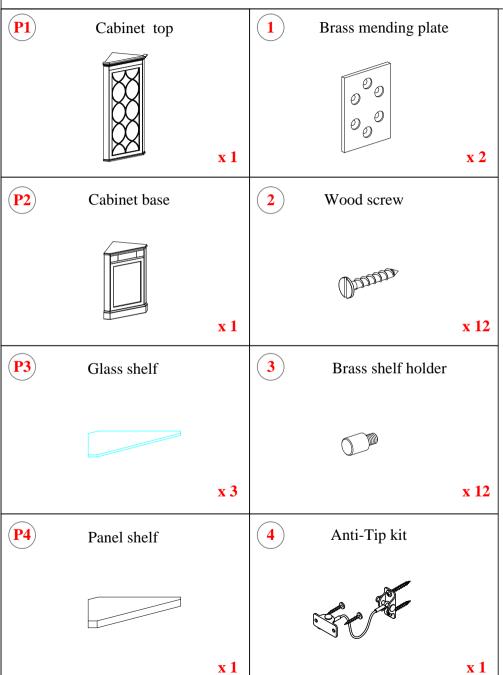


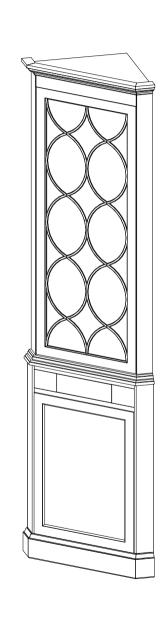




Page: 2/4
Date: 19-Aug-2020

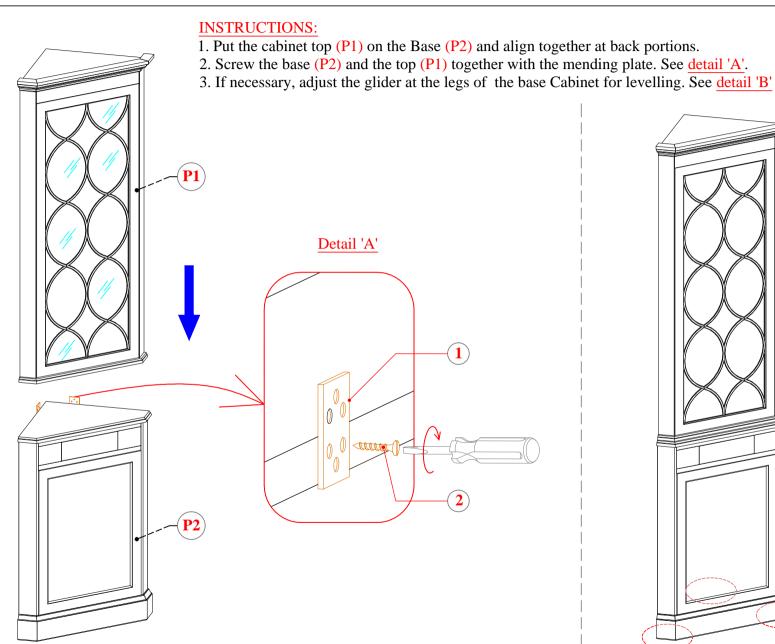

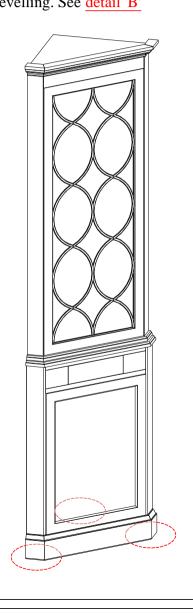

Detail 'B'







Page: 3/4

Date: 19-Aug-2020


ANTI TIP KIT INSTALLATION INSTRUCTION

- 1. Attach brackets to the top back frame of the furniture and secure with short-screws.
- 2. Determine the final position of the furniture piece and mark locations on the wall approximately 2" below the brackets mounted at the back of the furniture.
- 3. Drill a hole into the wall stud. If wall stud is not available, drill a hole into the solid wall and insert plastic anchor and gently tap the anchor until the flange is flush in the wall surface.
- 4. Attach the second set of brackets by inserting the long-screws through the bracket holes and into the wall.
- 5. Align the brackets at the back of furniture with the brackets in the wall.
- 6. Attach the Galvanized Steel Cable to the bracket and secure with clevis pin and hitch pin.

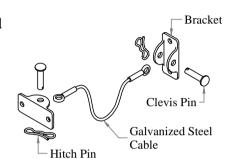

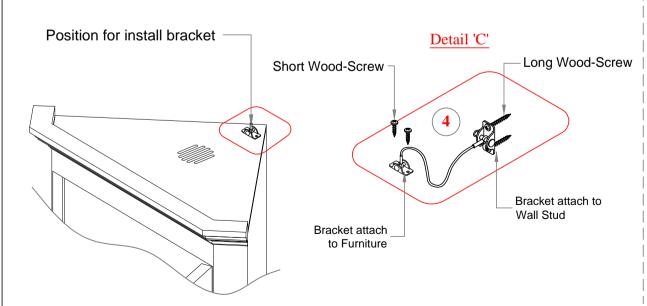

- 5. Open all the doors and place the glass shelf (P3), shelf panel (P4) to the cabinet.
- 6. Open the brass shelf holder to adjust the hight level of shelf. See <u>detail 'D'</u>

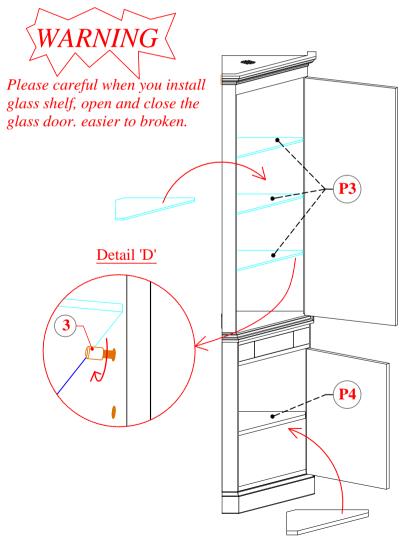



Page: 4/4

Date: 19-Aug-2020

