


# AL84010 CALIFORNIA KING BED

## ASSEMBLY INSTRUCTION

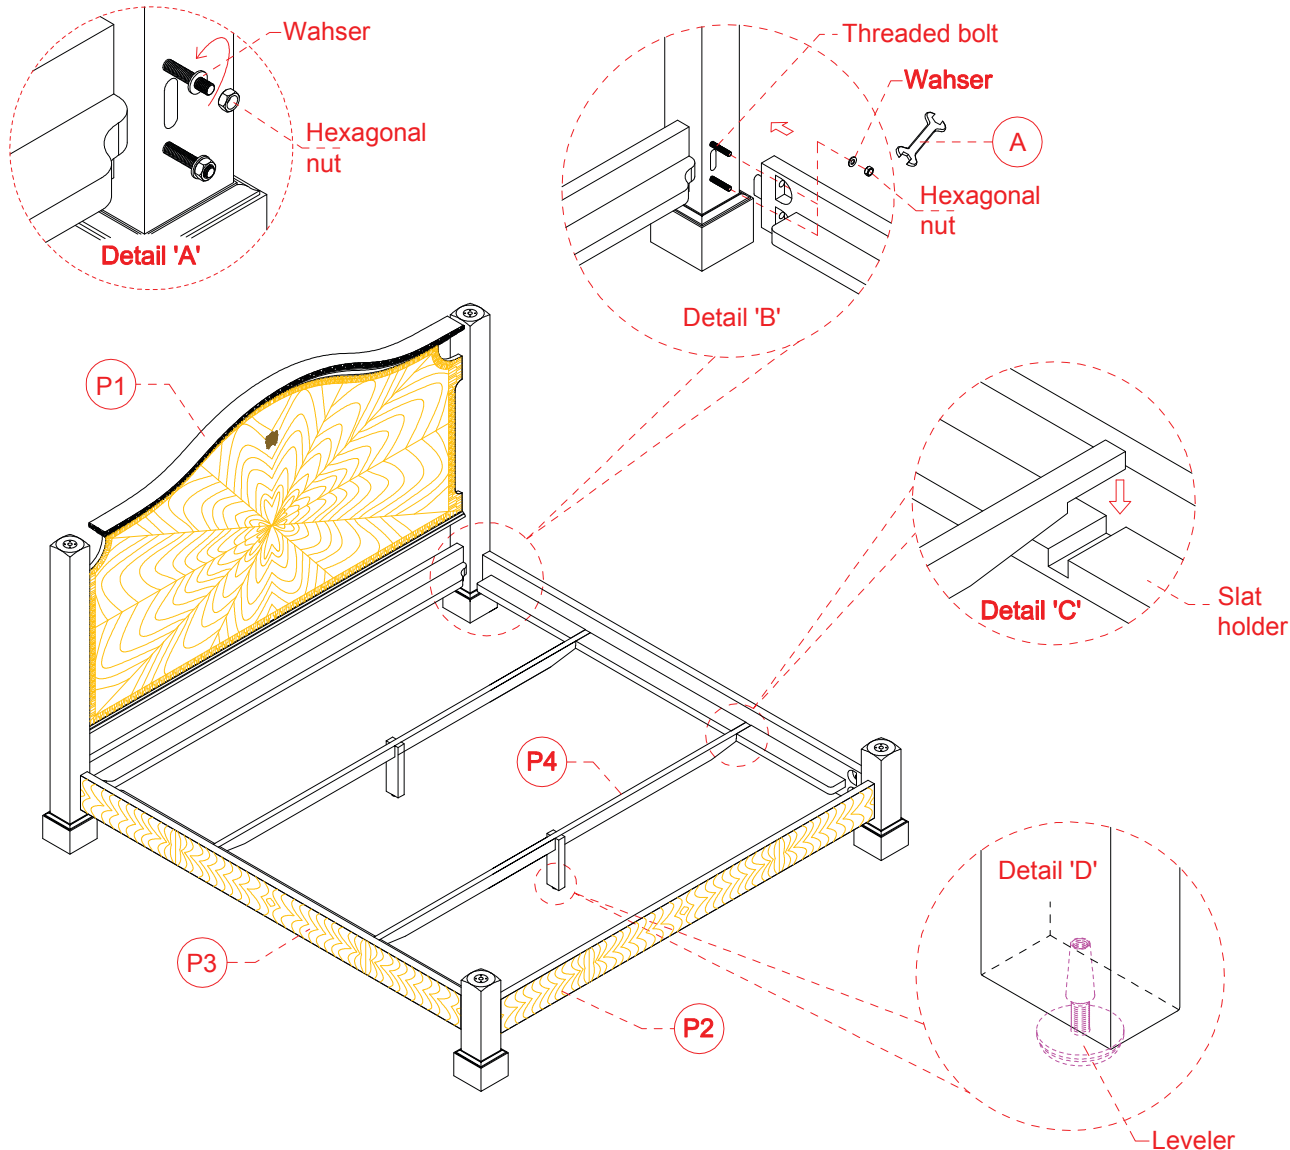

PARTS LIST	Q'TY	UNIT
P1. Head board	01	pc
P2. Foot board	01	pc
P3. Side rail.	02	pcs
P4. Bed slat.	02	pcs
P5. HB Post (Short).	02	pcs
P6. FB Post (Long).	02	pcs
P7. Finial.	04	pcs

HARDWARE LIST	Q'TY	UNIT
A. Steel open wrench	01	pc

### INSTRUCTIONS:

1. Remove all the Hex Nuts together with Washers which pre-installed on the Threaded bolts of the Headboard (P1) and the Footboard (P2). Refer to Detail 'A'.
2. Hold the Headboard (P1) in upright position. Align the holes on the end of the Side Rail (P3) to the Threaded bolts on the Headboard (P1). Install the Hex Nuts together with Washers on the Threaded bolts, tighten them by using Steel Open Wrench (A). See Detail 'B'.
3. Repeat step 2 to attach the other Side Rail (P3) to the Headboard (P1).
4. Repeat step 2 and step 3 to attach the Side Rails (P3) to the Footboard (P2).
5. Move the Bed to your desire location and set the Slats (P4) on the Slat Holder of the Side Rails (P3) as illustration in Detail 'C'.
6. If necessary, adjust the Leveler at bottom of the Slat Center Support Leg to level the bed slat. See Detail 'D'.

# AL84010 CALIFORNIA KING BED

## ASSEMBLY INSTRUCTION

7. Insert the Headboard Posts (P5) to the Headboard (P1) then turn them clockwise to tighten. DO NOT OVER TIGHTEN. See Detail 'E'.
8. Insert the Finials (P7) to the Headboard Posts (P5) then turn them clockwise to tighten. DO NOT OVER TIGHTEN. See Detail 'F'.
9. Repeat step 7 and step 8 to Attach the Footboard Posts (P6) and the Finials (P7) to the Footboard (P2).

