

ANTI TIP KIT INSTALLATION INSTRUCTION

1. Align the bracket to the top back panel of the furniture and secure with short screws.
2. Determine the final position of the furniture piece and mark locations on the wall approximately 2" below the brackets mounted at the back of the furniture.
3. Drill a hole into the wall stud. If wall stud is not available, drill a hole into the solid wall and insert plastic anchor and gently tap the anchor until the flange is flush in the wall surface.
4. Attach the second set of brackets by inserting the long-screws through the bracket holes and into the wall.
5. Align the brackets at the back of furniture with the brackets in the wall.
6. Attach the Galvanized Steel Cable to the bracket and secure with clevis pin and hitch pin.
7. Adjust all levelers until the correct level or flatness is achieved.

Repeat adjustment procedures if necessary. Please refer FIGURE 01


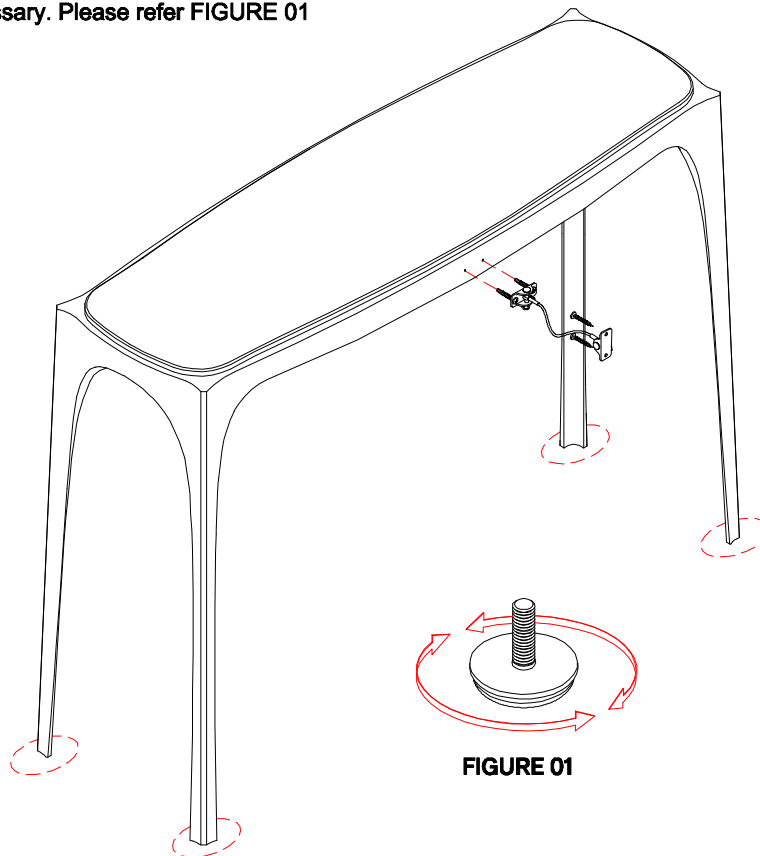


FIGURE 01

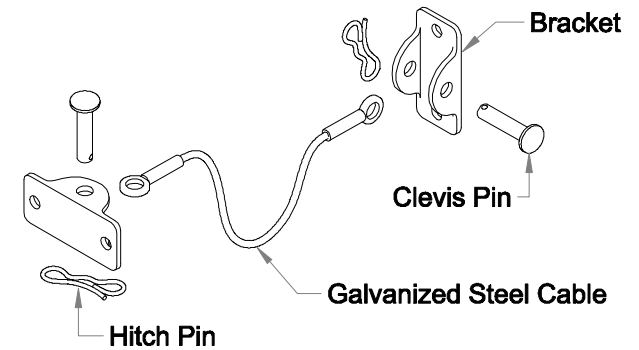