



TA82011 ASSEMBLY INSTRUCTION

P1 Headboard

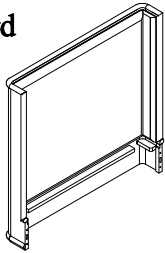


x 1

01 Steel threaded bar

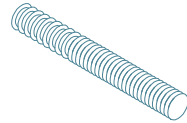


x 8

02 Fat Washers, Lock Washers, Hex Nuts




x 8

03 Steel open wrench

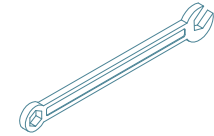


x 1

P2 Footboard

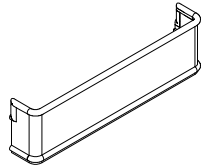


x 1

P3 Side Rail (Right & Left)

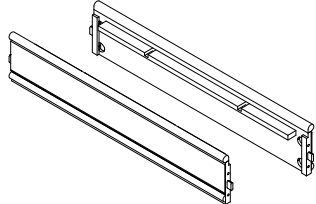

x 1

P4 Center Support

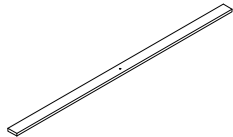


x 2

P5 Center Leg




x 2

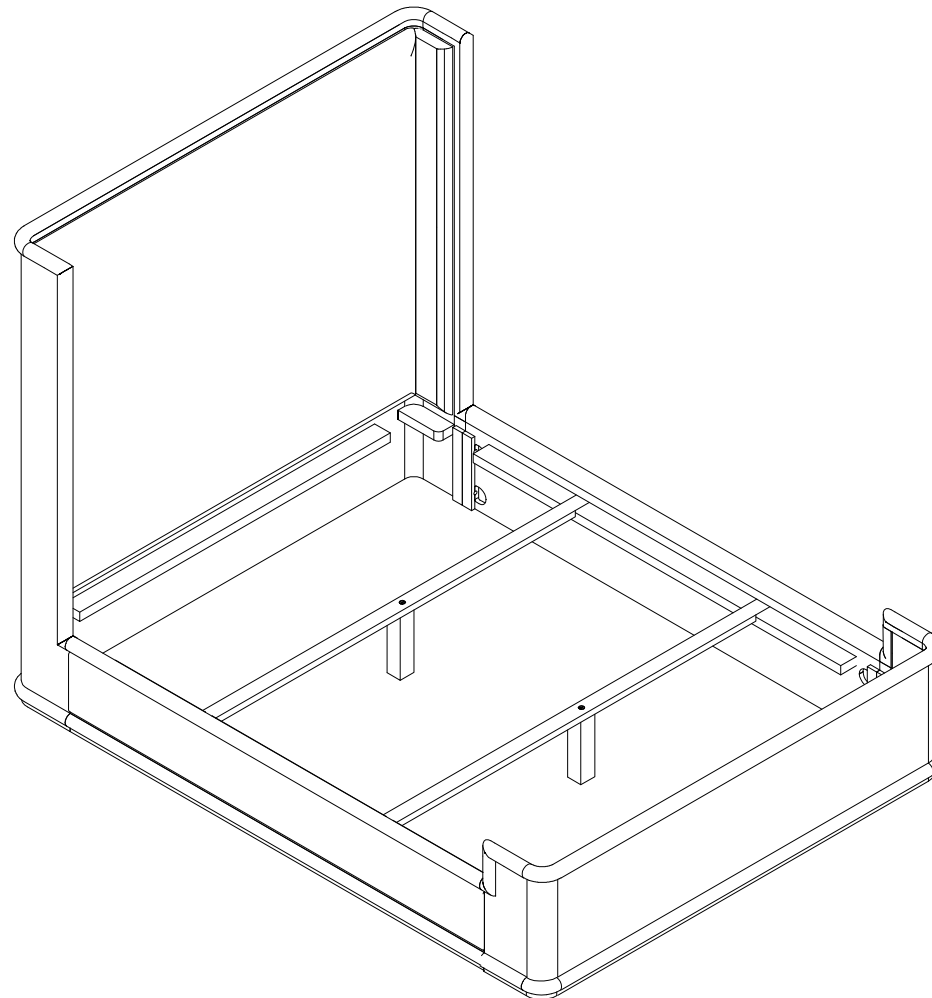


TA82011 ASSEMBLY INSTRUCTION


Step 1:

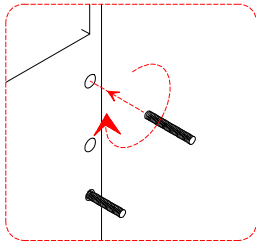


Detail 'A'

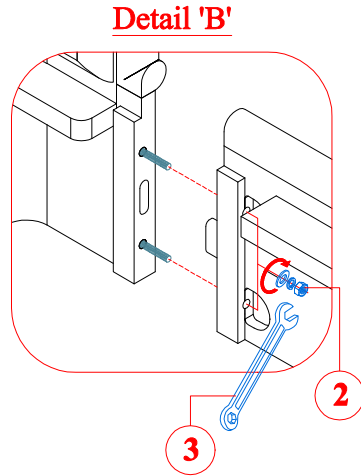



Detail 'B'

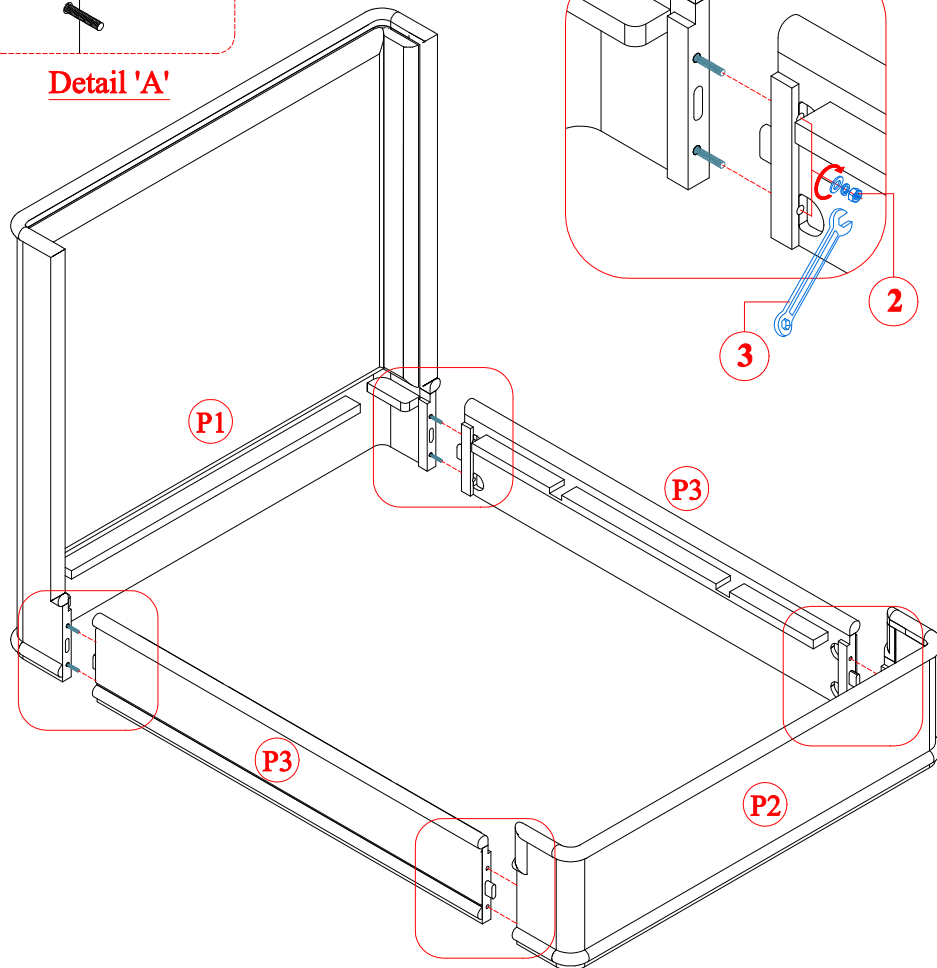

Step 2:

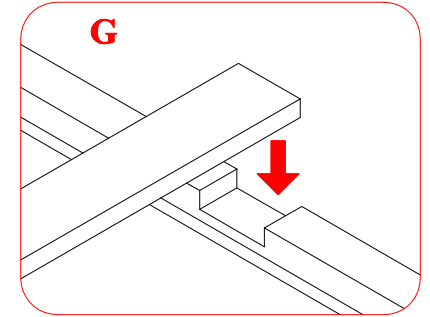


G

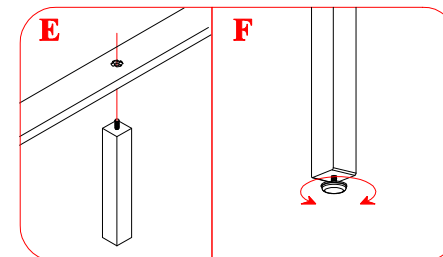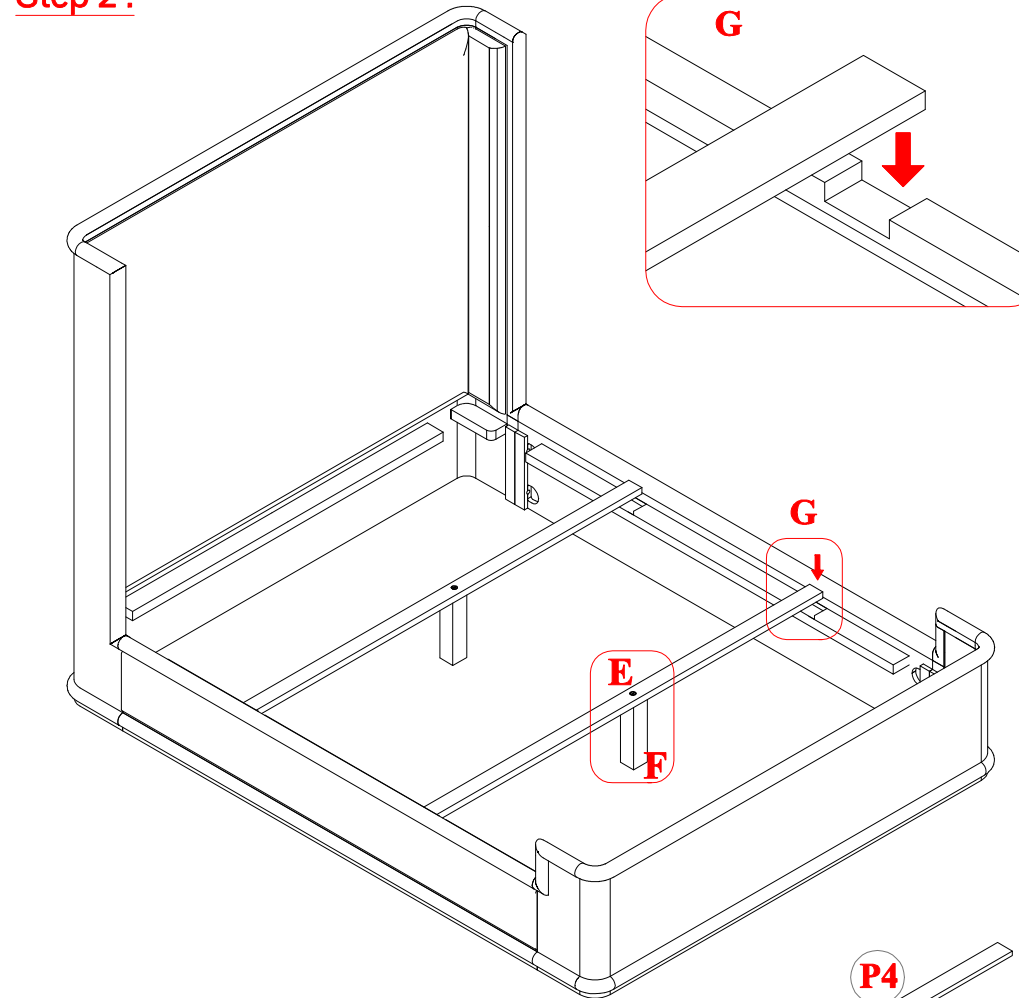

E

F

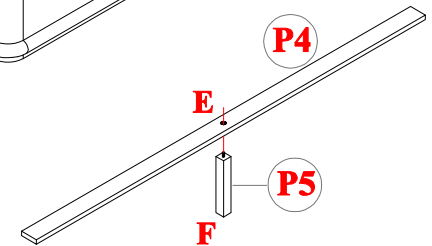

P4

E

F

P5