



TA84049

ASSEMBLY INSTRUCTION

P1 Headboard (x 1)

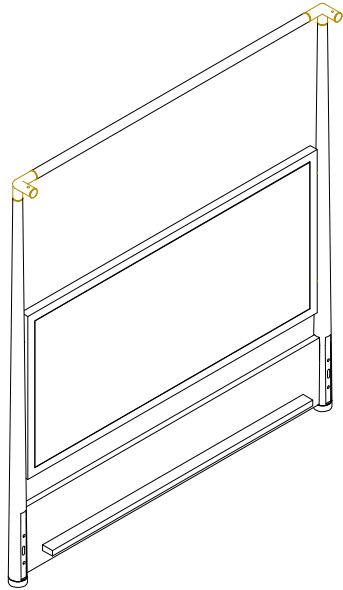

P3 Side rail (x 1set)

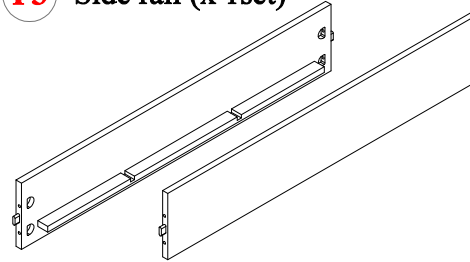

1 Steel threaded bar (x 8)




2 Half moon washer (x 8)




3 Hexagonal nut, lock, flat washer (x 8)




P4 Canopy (x 2)

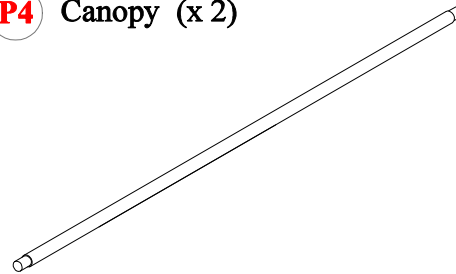


4 Steel open wrench (x 1)




5 Screw (x 4)




P2 Footboard (x 1)

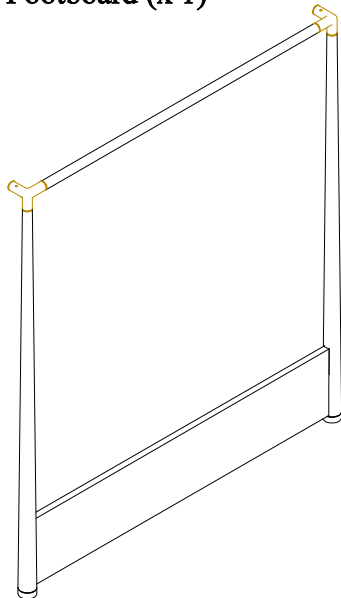

P5 Center Slat (x 2)

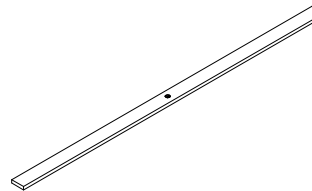


P6 Center Support (x 2)

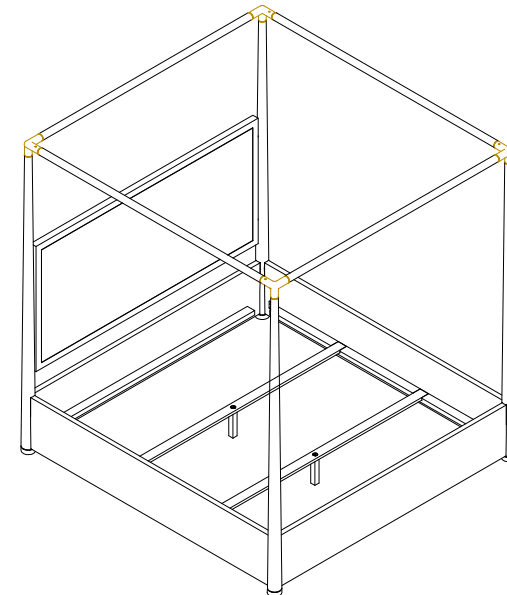


TA84049

ASSEMBLY INSTRUCTION

Step 1 :

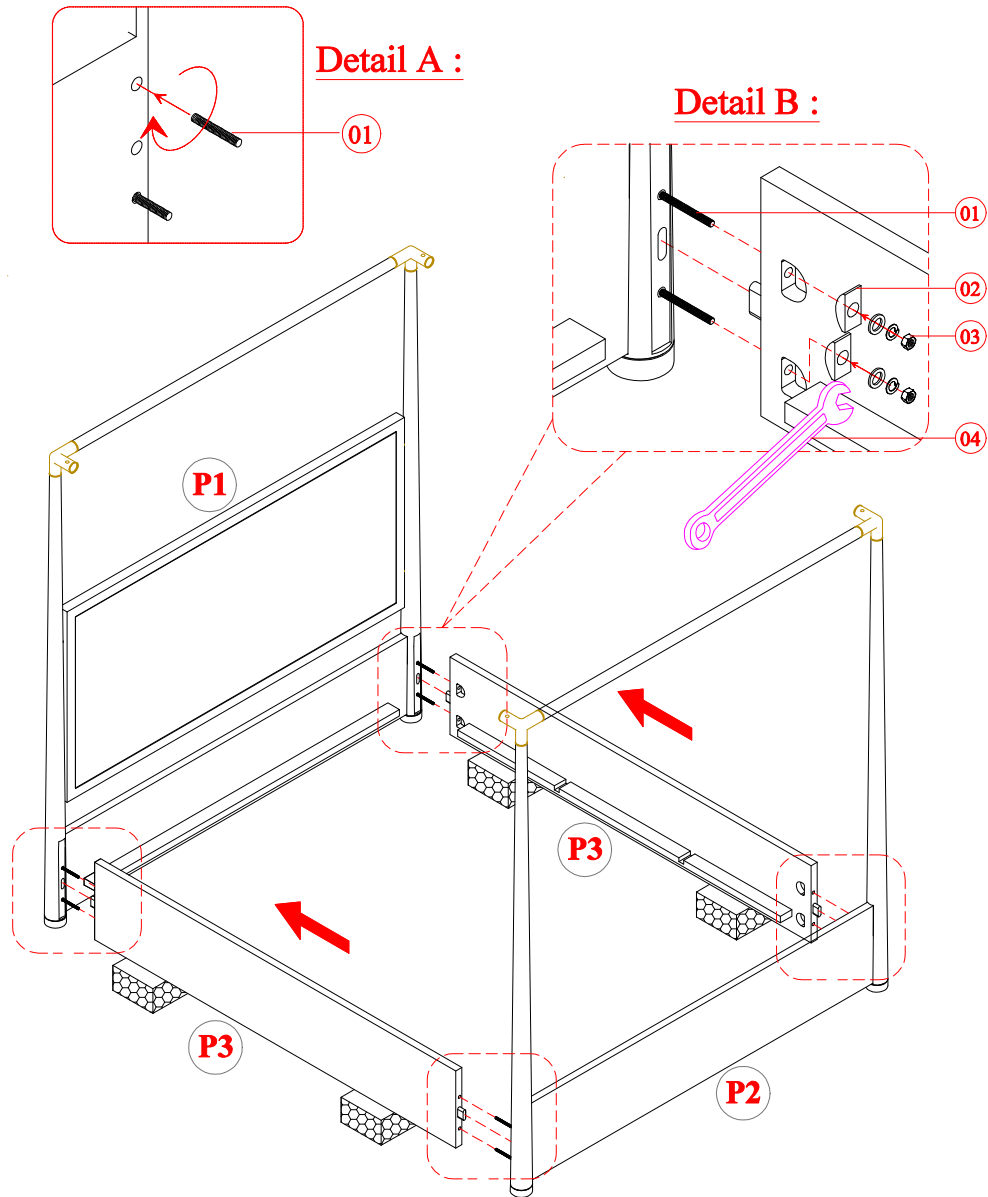


Note: Still loosening

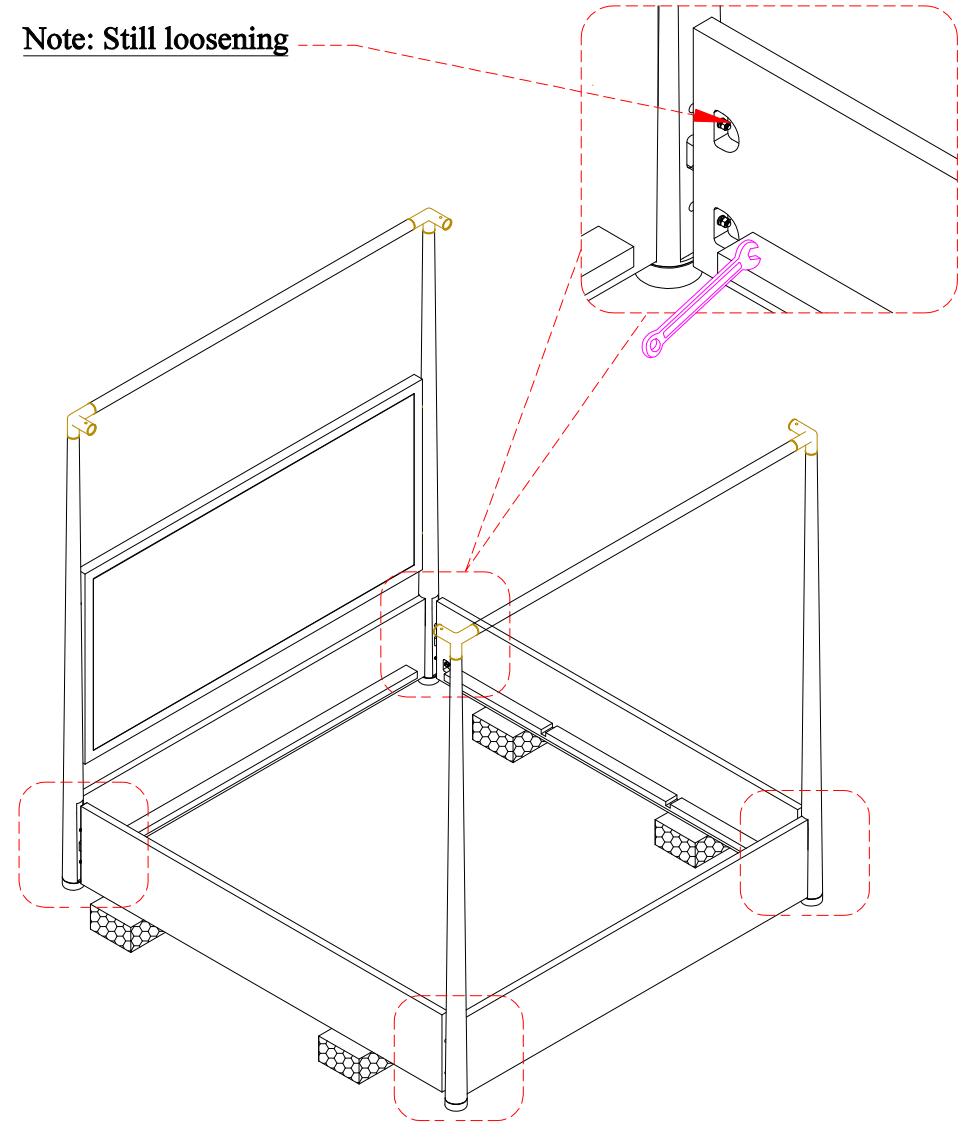


TA84049 ASSEMBLY INSTRUCTION

Step 2 :


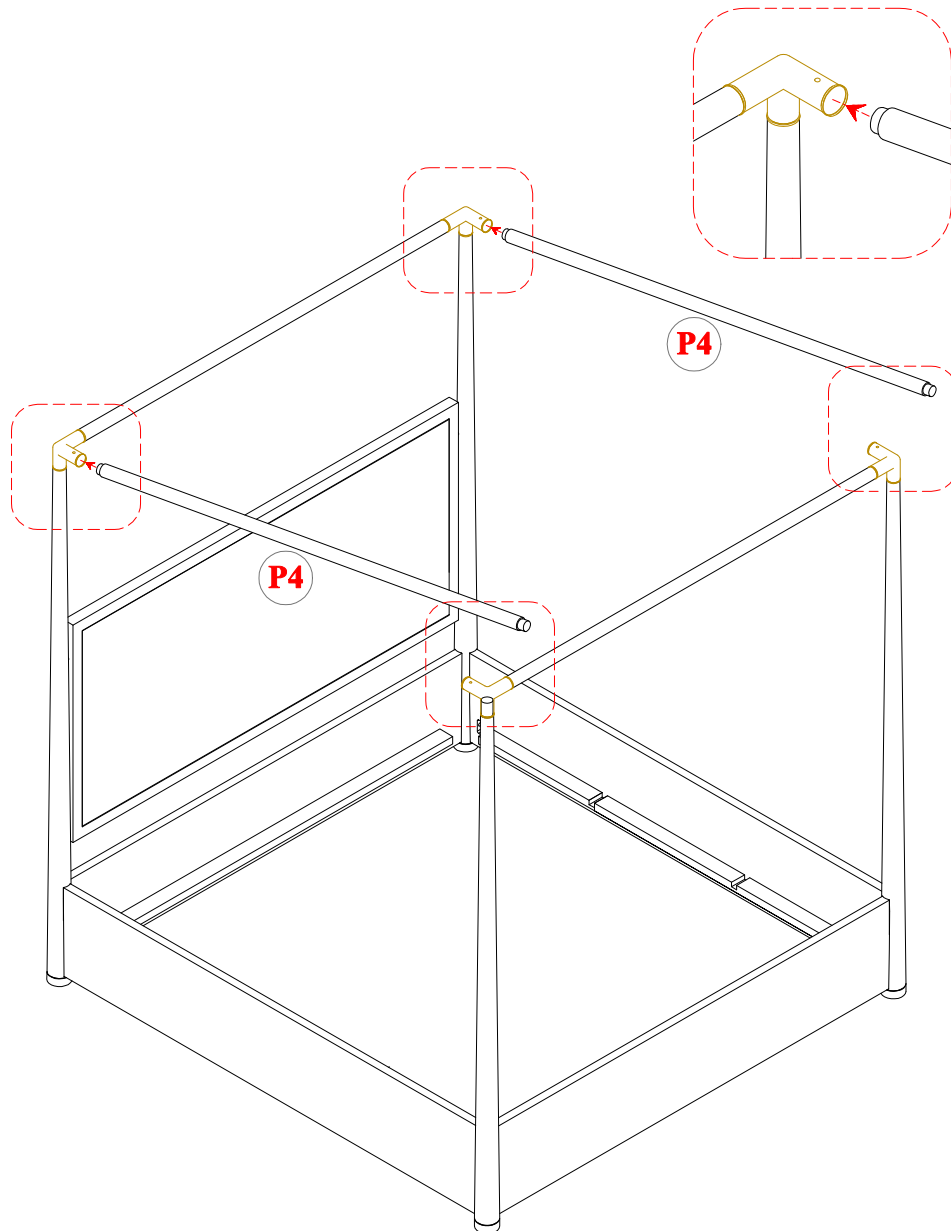


Step 3 :

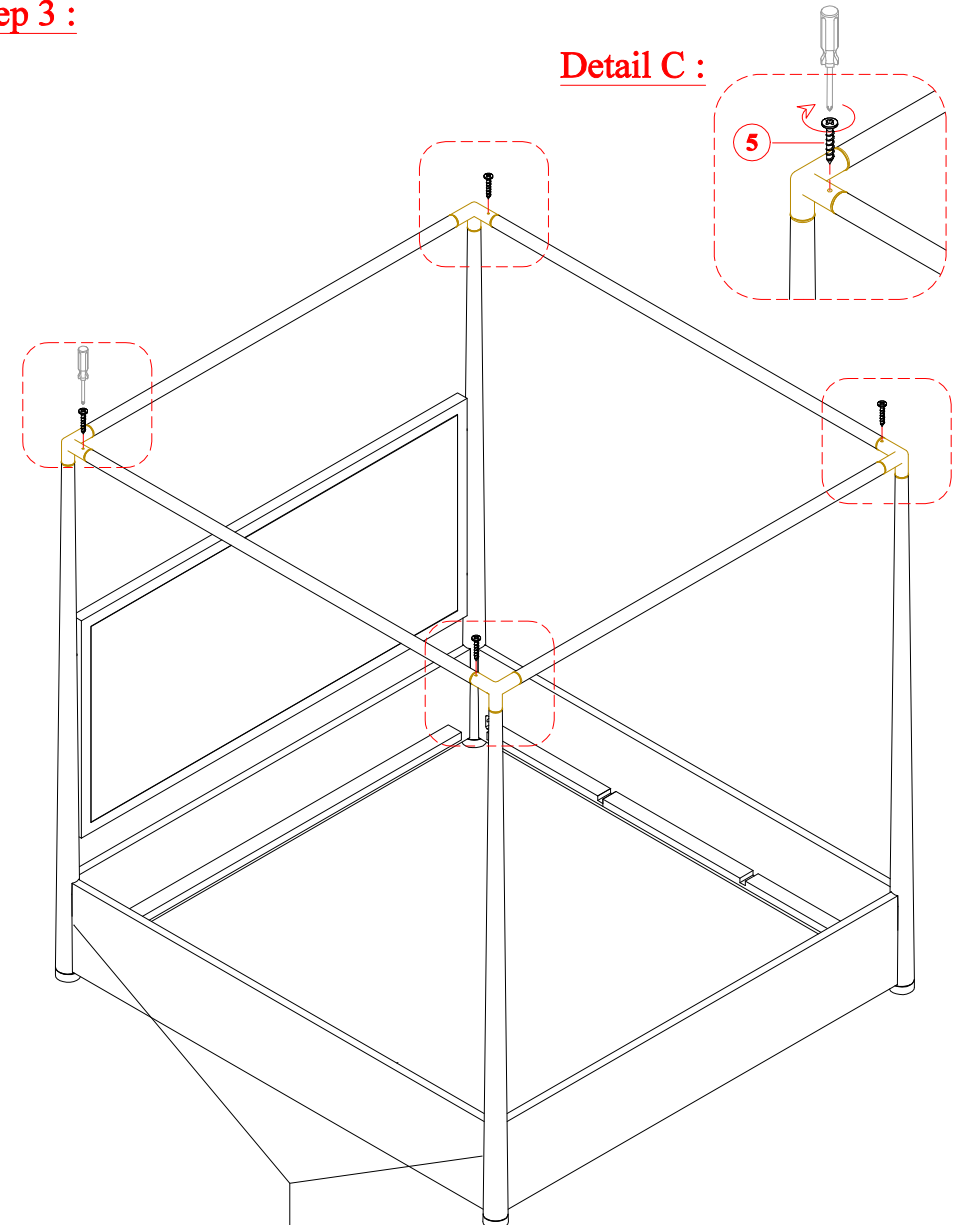

After assembling the canopy is complete.
Must be tightened with open wrench.

TA84049 ASSEMBLY INSTRUCTION

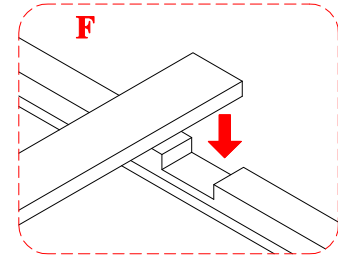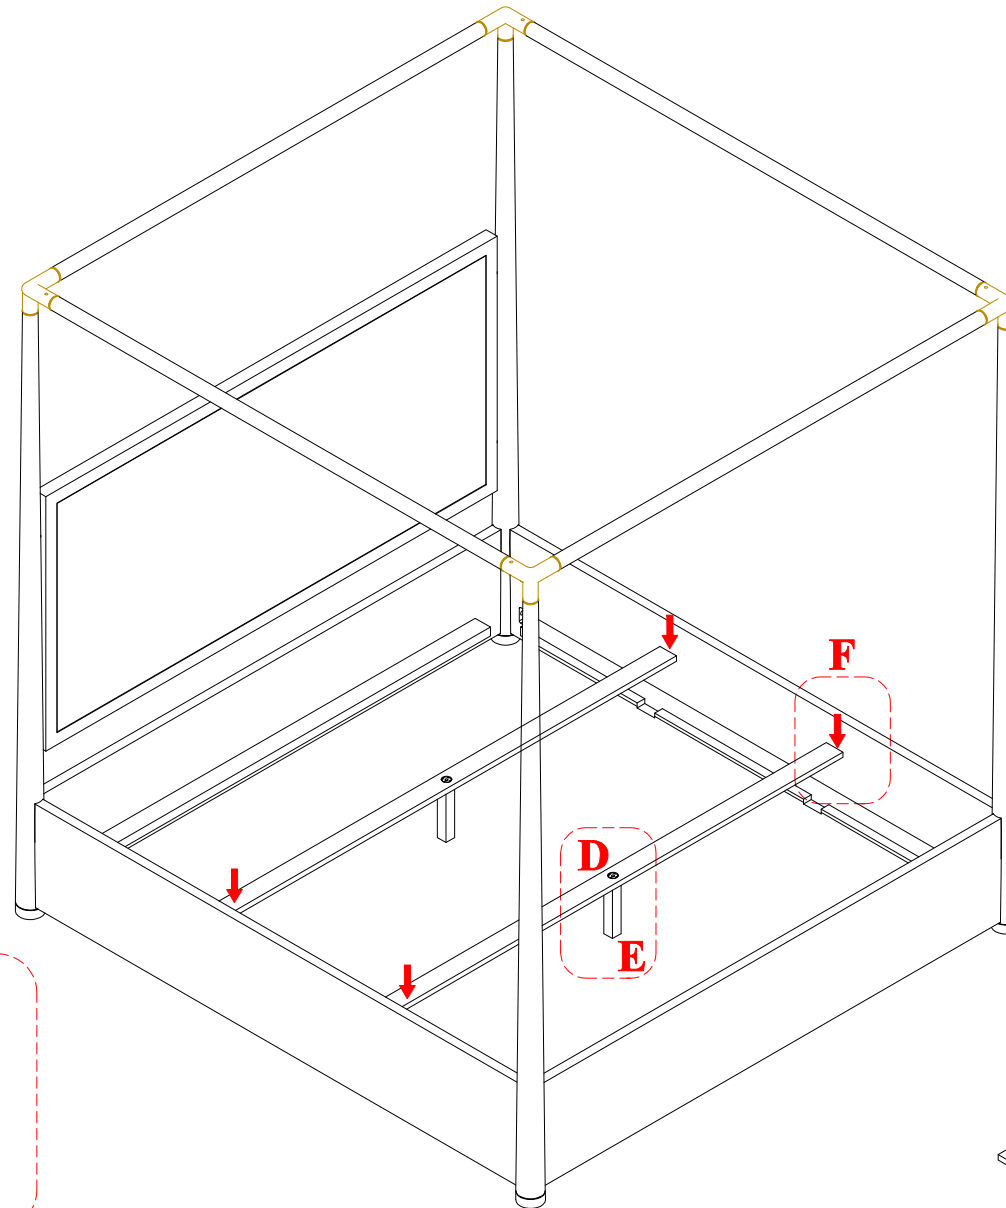

Detail D, E :

